

AVUE

Advanced Video Surveillance

**AVL240SDI
24" TFT LCD MONITOR
USER MANUAL**



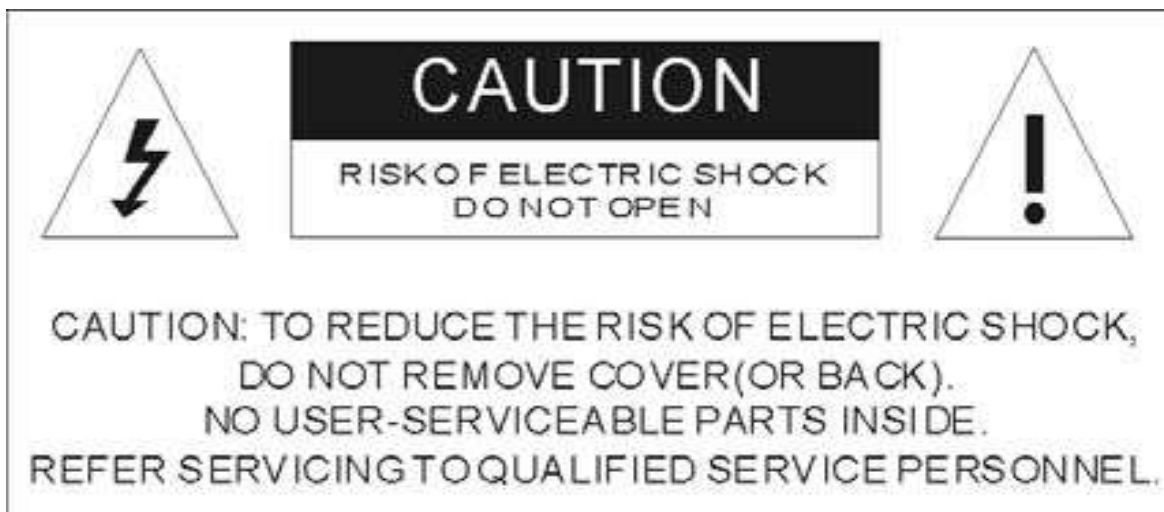
TABLE OF CONTENTS



Table of contents.....	2
Warning.....	3
Precautions	3
About this user manual.....	5
Items included in package.....	5
1. IR Remote control	6
2. LCD Monitor Mounting Guide	9
3. Monitor controls	10
4. Connections.....	11
5. Monitor Settings via OSD Menu.....	11
5.1 Picture	12
5.2 Sound.....	12
5.3 OSD Setup	13
5.4 Advance	13
5.5 PIP	14
5.6 PC	14
5.7 Geometry	15
5.8 PC Timing	15
6. Special features	15
7. Technical specifications	16
8. Appendices	17

WARNINGS:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

DO NOT INSERT ANY METALLIC OBJECT THROUGH VENTILATION GRILLS.

CAUTION:**EXPLANATION OF GRAPHICAL SYMBOLS**

	Danger: This symbol is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.
	Warning: This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Precautions:**Safety**

Should any liquid or solid object fall into the cabinet, unplug the unit and have it check by qualified personnel before operating it any further.

Unplug the unit from the wall outlet if it is not going to be used for several days or more. To disconnect the cord, pull it out by the plug. Never pull the cord itself.

Allow adequate air circulation to prevent internal heat built-up. Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilations holes.

Installation

Do not install the unit in an extremely hot or humid place or in a place subject to excessive dust or mechanical vibration.

The unit is not designed to be waterproof. Exposure to rain or water may damage the unit.

Cleaning

Clean the unit with slightly damp soft cloth. Use a mild household detergent. Never use strong solvents such as thinner or benzene as they might damage the finish of the unit.

Retain the original carton and packing materials for safe transport of this unit in the future.

Safety Precautions:

Federal Communications Commission (FCC) Statement

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received including interference that may cause undesired operation.

About this User Manual

This manual aims at assisting the user on how to operate the monitors described in this manual.

This manual is subject to rigid quality control. However, no guarantee can be given that mistakes are not present. We reserve the right to make changes to the manual without prior notice.

Before operating the appliance, please read this manual carefully and retain it for further reference. Verify that all appliance items are included in the delivery. Should items be missing, do not operate the appliance and contact your local dealer.

Never attempt to repair the appliance yourself. This should only be done by qualified service personnel.

Improper handling of the appliance will invalidate the warranty.

Items included in package

- 1x LCD Monitor
- 1x Power supply unit 12V DC
- 1x Power cord
- 1x VGA cable
- 1x Audio cable
- 1x IR remote control
- 1x User manual

1. IR remote control

(1) **Power**

Press this button to turn the monitor on/off.

(2) **Zoom**

Press this button to toggle between the different picture formats:

Full/Zoom/Subtitle/Regular/Panorama

(3) **Mute**

Press this button to disable the sound.
Press this button again to turn the sound on again.

(4) **Freeze**

Press this button to freeze the picture.
Press this button again to disable the freeze picture and to re-establish the normal picture.

(5) **PC/HD, AV1/AV2, SV**

You can select the appropriate signal source directly (PC = VGA).

(6) **Item**

Hot key for OSD adjustments of volume, contrast, brightness, hue, saturation, sharpness, and Red Green Blue.

(7) **Source**

To switch the video inputs (or sub picture source in pip mode), please use the IR remote control included in the delivery This button is also used as “Enter” and “Select” function in the OSD menu and to confirm your selected settings in the OSD menu.

(8) **OK / Menu**

Press this button to call-up the OSD menu. This button is also used as “Exit”.

Note: The menu button is also used to return to the previous menu.

(9) **Select ▲/▼**

Directional buttons up/down.

(10) **Display**

Press this button to call-up screen information such as resolution, signal source, etc.

(11) **Picture**

Press this button to toggle between the different picture modes: **User, Standard, Movie, Vivid.**

(12) **PIP**

Press this button to select the picture-in-picture function. Define the size of the sub picture: **Small, Medium, Large, POP Full, POP 4:3, OFF.**



(13) Swap

When in PIP mode, press the swap button to switch the main picture and the sub picture. The swap button is only active if you have defined a sub-picture before.

(14) Position

When in PIP mode, press the position button to define the position of the sub-picture: Either in one of the four screen corners or centered.

(15) ID

Can be control several monitors are installed in the same area.


In ID mode, press ID key, then input setting number (01-99), to unlock "ID" function.

(16) 0-9

For ID setting number used.

(17) USB/Right/Left/Catalog:

(17.1) Press "USB" Key into the JPEG Menu.	(17.2) Press "MENU" Key into the USB Main menu
	
(17.3) Press "Left" or "Right" key to select the JPEG/MP3/DRIVE function.	
	
(17.4) Press "Up/Down" Key to select play file.	
	
(17.5) Press "Right" Key to see file listing	

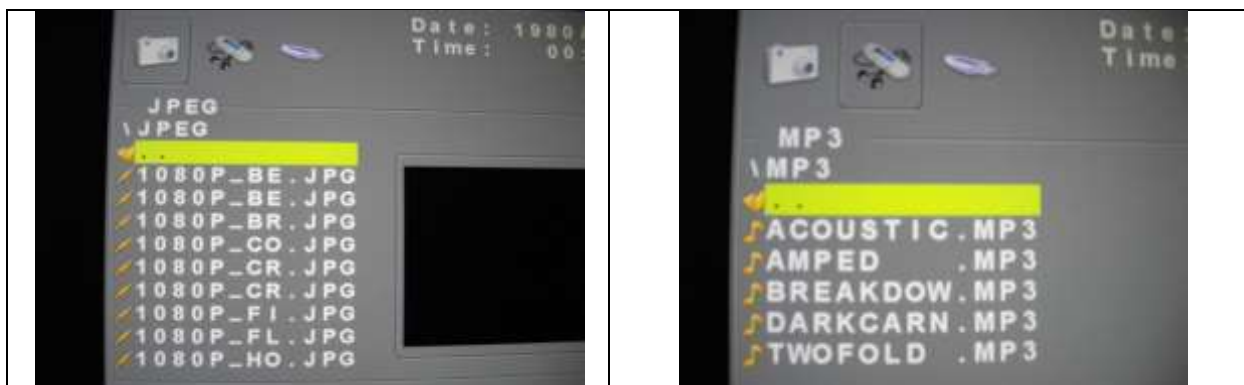

(17.6) Press “Up/Down” Key to select the play file and press Right key to play.
 Press “Menu” to stop play. Then press “Catalog” return the menu.
 Press “Menu” into the USB Main menu.




(17.7) Press “PC/HD”, “AV1/AV2” or “SV” to exit the USB function.



2. LCD Monitor Mounting Guide

A. Desktop


Adjust the viewing angle of LCD to fit most comfortable monitoring status.

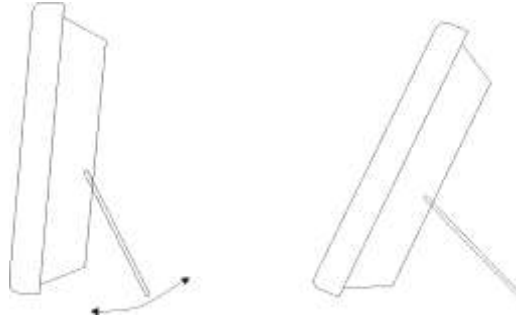


B. Wall mount

Free your space with wall mount design.


Please follow the fix-hole size in back panel to install the LCD to the wall.

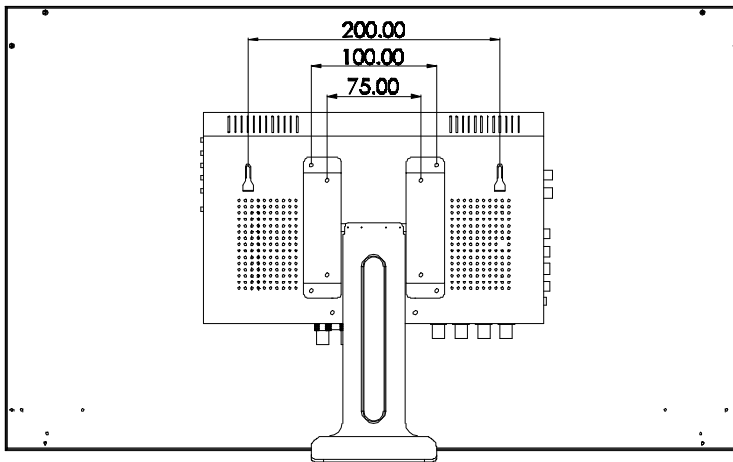

C. VESA Bracket

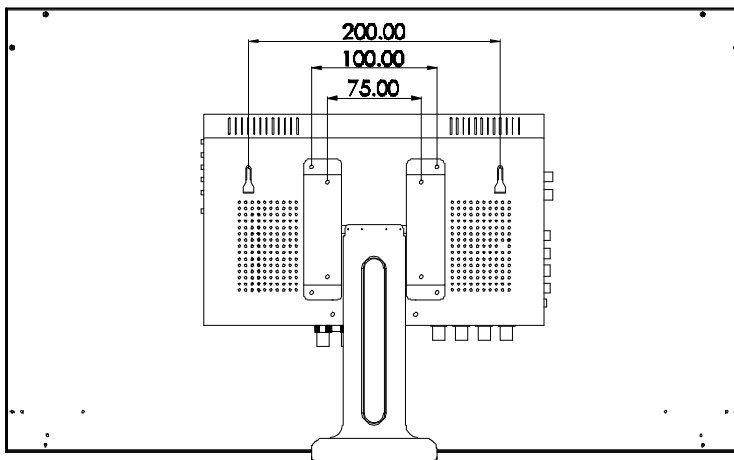

3. Monitor controls

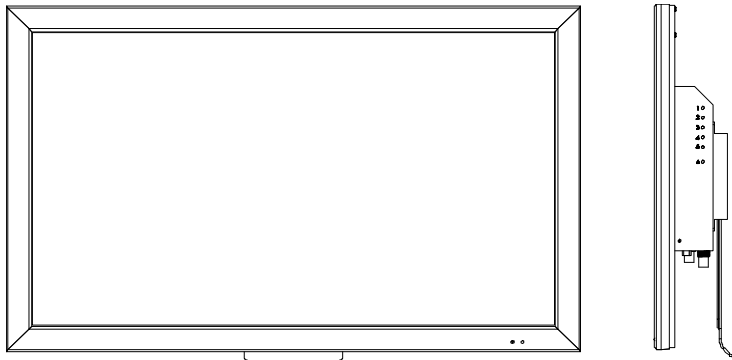

(1) Power

Turn the monitor on/off. LED: Green Monitor on LED: Red: Standby mode (no input signal)

(2./3.) Adjust Up / Down ▲/▼

Increase or decrease the values in the OSD menu: Up: Increase the values.
Down: Decrease the values.

(4) Item/Select

Hot key for OSD adjustments of volume, contrast, brightness, hue, saturation, sharpness, and Red, Green, Blue.

(5) Menu/Function

Press this button to call-up the OSD menu. This button is also used as “Exit”.

(6) Source

To switch the video inputs, (or sub picture source in pip mode) This button is also used as “Enter” and “Select” function in the OSD menu and to confirm your selected settings in the OSD menu.

KEY Lock Function:


Into key lock mode:

Push “Menu” and “Item” after the LED flashes, OSD of screen will show “Key Lock”.

Into key unlock mode:

Push again after the LED flashes, OSD of screen will show “Key Unlock”.

4. Connections

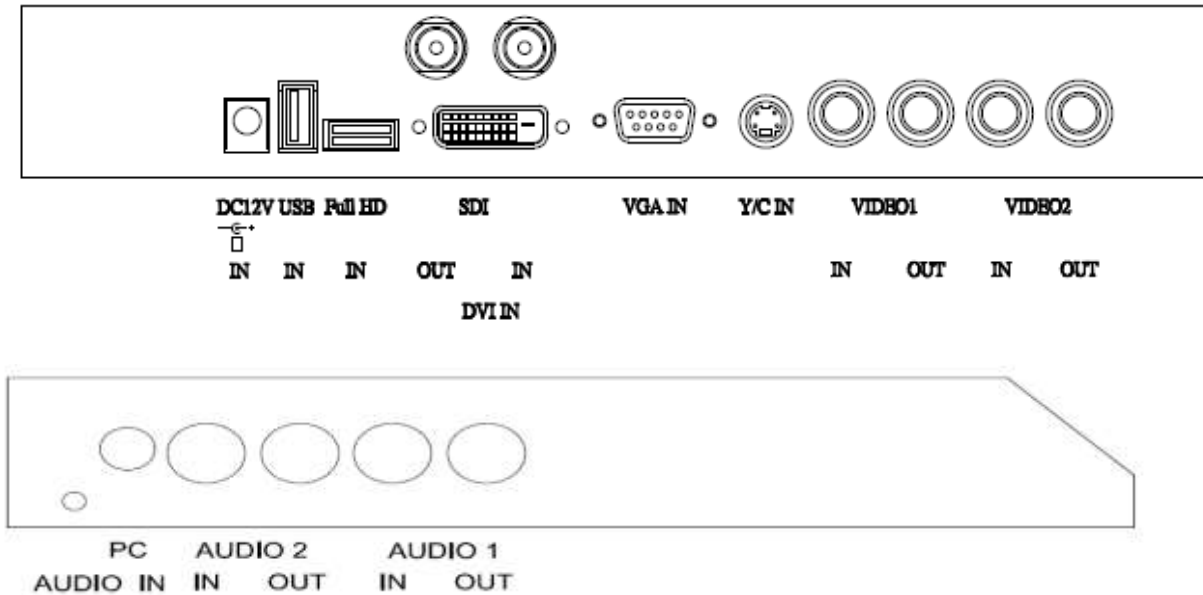

NOTE:

Connections of Audio

	Audio 1	Audio 2	PC Audio
AV1	X		
AV2		X	
S-Video		X	
PC			X
DVI			X

5. Monitor Setting via OSD Menu

Various monitor settings can be made using the OSD menu (On Screen Display). Press the Menu/OK button to call-up the OSD main menu. Here you can make adjustments to the following items:

- Picture
- Sound
- OSD Setup
- Advance
- PIP
- PC (at PC input signal)
- Geometry (at PC input signal)

Use the ▲/▼ buttons to toggle between the different items.
Press the Source button to select the appropriate item.

5.1 Picture

Use the ▲▼ buttons to select adjusts item, and press source button to confirm. Then use the ▲▼ buttons to increase/decrease the values, or use “source” button to change the values. Press the menu button to return to the previous menu item.

Item	Description
Contrast	Use the ▲▼ buttons to increase/decrease the screen contrast.
Brightness	Use the ▲▼ buttons to increase/decrease the screen brightness.
Hue	Use the ▲▼ buttons to increase/decrease the hue.
Saturation	Use the ▲▼ buttons to increase/decrease the saturation.
Sharpness	Use the ▲▼ buttons to increase/decrease the sharpness.
Color Temp.	Use the source buttons to select the color temperature: Normal, Warm, Cool, User.
DNR (Noise Reduction)	Use the source buttons to select the level of noise reduction: Off, Low, Medium, High.
DLC	Use the source buttons to change the Black Level Extension on/off.

5.2 Sound

Use the ▲▼ buttons to select adjusts item, and press source button to confirm. Then use the ▲▼ buttons to increase/decrease the values, or use “source” button to change the values. Press the menu button to return to the previous menu item.

Item	Description
Volume	Use the ▲▼ buttons to adjust the volume.
Mute	Use the source buttons to change the Mute on/off.
Sound Mode	Use the source buttons to adjust the effect: User, Standard, Movie, Vivid.
Bass	Use the ▲▼ buttons to adjust the bass.(for R/L Audio in use)
Treble	Use the ▲▼ buttons to adjust the treble. (for R/L Audio in use)
Balance	Use the ▲▼ buttons to adjust the balance. (for R/L Audio in use)

5.3 OSD Setup

Use the ▲▼ buttons to select adjusts item, and press source button to confirm. Then use the ▲▼ buttons to increase/decrease the values, or use “source” button to change the values. Press the menu button to return to the previous menu item.

Item	Description
Language	Use the source buttons to select the language.
Set ID	Can be control several monitors are installed in the same area. Use the source buttons to into the function. Then use up/down key to select you setting the number (01~99), then press menu to exit.osd. Press IR remote control “ID” key again to confirm the SET ID function.
Gamma	Use the source buttons to set the gamma values.(0,1,2)
Freeze	Use the source buttons to freeze the picture. Press this button again to disable the freeze picture and to re-establish the normal picture.
OSD Time	Use the ▲▼ buttons to setting the OSD menu display time.
OSD Halftone	Use the ▲▼ buttons to setting the OSD menu display time.
Recall	Press the source button to restore the factory settings.
Obiter (Anti blur)	Use the source buttons to on/off the screen saver. (Screen protector: Anti blur)
Version	Firmware Version

5.4 Advance

Use the ▲▼ buttons to select adjusts item, and press source button to confirm. Then use the ▲▼ buttons to increase/decrease the values, or use “source” button to change the values. Press the menu button to return to the previous menu item.

Item	Description
Scale	Use the source buttons to select the picture size: Full/Zoom/Subtitle/Regular/ /Panorama.
Scan Size	Use the source buttons to select the real image size: Normal/Native
H Position	Use the ▲▼ buttons to position the picture horizontally.
V Position	Use the ▲▼ buttons to position the picture vertically.

5.5 PIP

Use the ▲▼ buttons to select adjusts item, and press source button to confirm. Then use the ▲▼ buttons to increase/decrease the values, or use “source” button to change the values. Press the menu button to return to the previous menu item.

Item	Description
Multi Window	Use source button to select the picture-in-picture function: PIP, POP Full, POP 4:3 Off.
Sub Source	Use source button to select the source of the PIP sub-picture.
Size	Use source button to set the size of the sub-picture: Small, Medium, Large.
Position	Use source button to define the position of the sub-picture. Note: This function is only active if you have previously defined a sub picture.
Border Color	Use source button to select the sub-picture background color: Black /Blue.
Sound Source	Use source button to select the sound source: Main/Sub.
Swap	Use source button to swap the main picture and the sub picture. Note: This function is only active if you have previously defined a sub picture.

5.6 PC

Use the ▲▼ buttons to select adjusts item, and press source button to confirm. Then use the ▲▼ buttons to increase/decrease the values, or use “source” button to change the values. Press the menu button to return to the previous menu item.

Item	Description
Contrast	Use the ▲▼ buttons to increase/decrease the screen contrast.
Brightness	Use the ▲▼ buttons to increase/decrease the screen brightness.
Color Temp	Use the source buttons to select the color temperature: Normal, Warm, Cool, sRGB, User.
Scale	Use the source buttons to select the picture size: Normal/Center
Auto Adjust	Use the source buttons to Adjust the best image.

5.7 Geometry

Use the ▲▼ buttons to select adjusts item, and press source button to confirm. Then use the ▲▼ buttons to increase/decrease the values, or use “source” button to change the values. Press the menu button to return to the previous menu item.

Item	Description
H Position	Use the ▲▼ buttons to position the picture horizontally.
V Position	Use the ▲▼ buttons to position the picture vertically.
Clock	Use the ▲▼ buttons to Adjust image distortion appearing as vertical or “noise” on the screen.
Phase	Use the ▲▼ buttons to Adjust image distortion appearing as horizontal or “noise” on the screen.

5.8 PC Timing

Mode	Resolution
1	800 x 600 @ 60
2	800 x 600 @ 72
3	800 x 600 @ 75
4	1024 x 768 @ 60
5	1280 x 1024 @ 60
6	1360 x 768 @ 60
7	1440 x 900 @ 60
8	1920 x 1080 @ 60

6. Special Features

- Special Video Processor.
- 3G-SDI IN/OUT
- PIP Control Function (Only PC/Video).[Video/Video option]
- Screen protector (Anti-blur /Image auto move).
- NTSC/PAL Auto Switch.
- 3D De-interlace Technology.
- 3D Comb Filter Technology.
- Automatic Color Control and Color Killer.
- Luminance transient improvement(LTI),Chrominance transient improvement(CTI)
- Directional zoom engine.
- Video out support auto termination (75 Ohms).
- Build-in 2W speaker,
- Support IR remote controller.
- VESA standard bracket 75/100mm

7. Technical specifications

Monitor model	AVL240SDI
System	PAL / NTSC
LCD panel	24"
Visible area (mm)	531.3 x 298.8
Picture format	16:9
Max. resolution	1920x1080
Pixel dot pitch (mm)	0.276.7 x0.276 .7
Colors	16.7M
Brightness	250 cd/m ² [LED]
Contrast	1000:1
Response time(Tr/Tf)	3.5/1.5 ms
View angle (U/D/L/R)	80/80/85/85
Video input/output	2x / 2x Composite (BNC) ; 1x /1x SDI
S-Video input	1x 4 Pin Mini Dim
Full HD input	1x Full HD (A Type)
Audio input/output	2x / 2x (RCA)
PC input	1x VGA input (D-Sub 15 pin) 1x Audio input 1x DVI-D input
Speaker	1x built-in speaker (2 watt)
SDI standards	3G-SDI[SMPTE 424M] HD-SDI[SMPTM 292M] SD-SDI[SMPTE 259M]
SDI Video support	[3G] 1080P50/60(4:2:2) [HD]720P@50/60Hz,1080i@50/60Hz 1080p25/30Hz [SD]NTSC/60Hz,PAL/50Hz
SDI Video bandwidth	2.97Gpbs&2.975/1.001Gpbs
SDI Cable Transmission	3G-SDI[100Meter],HD-SDI[200Meter],SD-SDI[300Meter] _(5C2V orRG6Cable)
3D Comb Filter	Yes
3D De-Interlace function	Yes
Picture-in-Picture (PIP)	Yes (video/PC)
OSD setting	Yes
Power input	AC 100-240V 50/60Hz, Adapter DC 12V/5A
Power consumption	Approx. 24watt
Dimensions (WxHxD) mm	575.9 x 347.8 x 74.1
Weight	5.7kg
Operating temperature	0° to 40° C

Subject to technical changes without prior notice. Error expected.

APPENDICES

TROUBLESHOOTING

The tables provided below include some problems that the user may encounter while using the display and the corresponding solutions. Please refer to the contents of this section prior to contacting service personnel.

Problem	Possible Causes	Solutions
No picture	<ol style="list-style-type: none"> 1. Is the power cable connected to the unit? 2. Is the unit turned on? 3. Is the signal cable connected to the unit? 4. Is the unit in power saving mode? 	<ol style="list-style-type: none"> 1. Make sure the power cable has been properly connected to the unit. 2. Turn on the unit. 3. Make sure the signal cable has been properly connected to the unit. 4. Press any key on computer keyboard.
Strange color	<ol style="list-style-type: none"> 1. Is the signal cable connected to the unit? 	<ol style="list-style-type: none"> 1. Make sure the signal cable has been properly connected to the unit.
Picture distortion	<ol style="list-style-type: none"> 1. Is the signal cable connected to the unit? 2. Is the video input signal within the unit's specified frequency range? 	<ol style="list-style-type: none"> 1. Make sure the signal cable has been properly connected to the unit. 2. Make sure the input signal is within the unit's specified frequency range.
Picture is too dim	<ol style="list-style-type: none"> 1. Have the unit's brightness and contrast settings been set to the lowest level? 	<ol style="list-style-type: none"> 1. Adjust brightness and contrast
Only sound but no picture	<ol style="list-style-type: none"> 1. Is the connection of the input signal correct? 	<ol style="list-style-type: none"> 1. Check connection of input signal. 2. Make sure the signal cable has been properly connected.
Only picture but no sound	<ol style="list-style-type: none"> 1. Is the signal cable connected to the unit? 2. Has the volume been set to the min level? 3. Is the audio cable connected to the unit? 	<ol style="list-style-type: none"> 1. Make sure the signal cable has been properly connected to the unit. 2. Adjust the volume to an appropriate setting. 3. Make sure the audio cable has been properly connected to the unit.

Please contact the customer service center of your local dealer if you have any questions regarding the unit after reading the information provided above.

**THANK YOU FOR CHOOSING AVUE
PRODUCTS. 😊**